

User Manual



tSENSE (Disp) T RH RL

CO₂-, temperature- and
relative humidity transmitter



General

tSENSE (Disp) for wall mounting measures indoor air carbon dioxide concentration, temperature and relative humidity in rooms. *tSENSE (Disp)* is available with or without colour touch display (LCD).

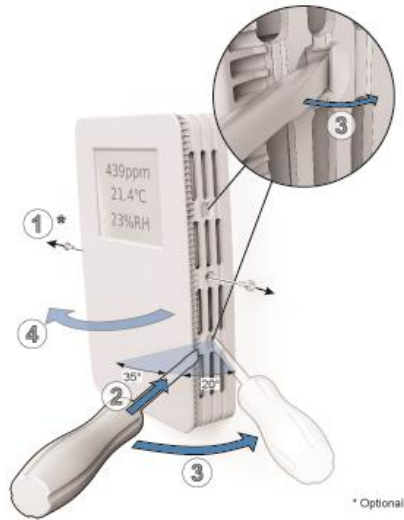
The unit connects to Direct Digital Control (DDC).

Linear outputs are pre-programmed as CO₂-, temperature- and relative humidity transmitter. Measuring ranges can be modified from PC (Windows) software UIP (version 5 or higher) and USB communication cable, alternative via Modbus or BACnet.

Table of contents

General	1
Table of contents.....	2
Opening of housing.....	3
Download of software UIP	3
Enter PIN code.....	4
Output Configurations	4
Outputs.....	5
Out1/Out2/Out3	5
Voltage range	5
Select source	5
Types	6
Measure range settings	6
Relay	7
Communication settings.....	7
Protocol	7
Address/Baud rate.....	8
Connection configurations	8
Measured values.....	9
Display settings	10
Limits	10
Chart 24h/Week.....	10
Screen settings	11
Brightness.....	11
Background	11
Screensaver, Time setting.....	11
Toggle (Time and CO ₂ and/or Temperature and/or Humidity)	12
Meter settings.....	13
Meter information.....	13
Temperature unit (°C/°F).....	13
Calibration options CO ₂	14
Zero cal/Background/Target cal	14
ABC	15
Temperature/Humidity Offset	16
Automatic system test.....	17
Error codes and action plans	18
UIP Logger	19
Export Logger Data	19
Log to file.....	19
PIN codes.....	20
Change PIN code for access to display settings (PIN1)	20
Toggle PIN1 On/Off.....	20
Change PIN code for access to meter settings (PIN2)	20
Maintenance.....	21

Opening of housing



Plin

Figure 1

Download of software UIP

senseair.se/products/software/uiip-5/

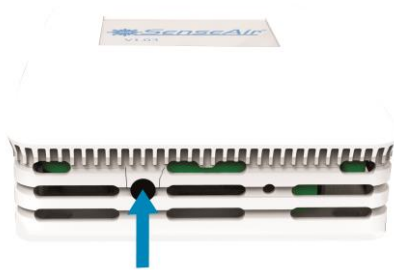


Figure 2: Connection to PC via phone jack
Connect Interface cable USB – 3.5mm Art.No.:00-0-0070

Check for updates

<p>1</p>	<p>2 New version available</p>	<p>2</p>
<p>3</p>	<p>4</p>	

Enter PIN code

<p>0 Power ON</p>	<p>1</p> <p>CO₂ 429ppm Temperature 23.1°C Humidity 21%RH</p>	<p>2 PIN1: 1111</p> <p>Enter PIN 1111</p> <table border="1"> <tr><td>2</td><td>3</td></tr> <tr><td>5</td><td>6</td></tr> <tr><td>8</td><td>9</td></tr> <tr><td>Del</td><td>«</td></tr> </table>	2	3	5	6	8	9	Del	«	<p>3</p> <p>CO₂ Screen Temperature Settings Humidity «</p>
2	3										
5	6										
8	9										
Del	«										
<p>4 PIN2: 2001</p> <p>Enter PIN 2001</p> <table border="1"> <tr><td>2</td><td>3</td></tr> <tr><td>5</td><td>6</td></tr> <tr><td>8</td><td>9</td></tr> <tr><td>Del</td><td>«</td></tr> </table>	2	3	5	6	8	9	Del	«	<p>5</p> <p>Meter Measurements Outputs Misc «</p>		
2	3										
5	6										
8	9										
Del	«										

Output Configurations

Terminal	Default Output	Default Output Range	Outputs of this sensor	Output Ranges of this sensor
OUT(1)	0 – 10VDC	0 – 2000ppm CO ₂	See label	See label
OUT(2)	0 – 10VDC	0 – 50°C	See label	See label
OUT(3)	0 – 10VDC	0 – 100%RH	See label	See label

Table 1. Default output configurations of tSENSE (Disp)

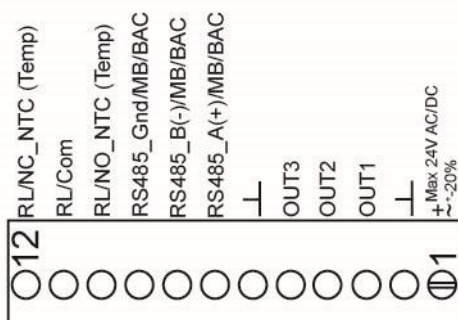


Figure3: Screw Terminal

Connect the sensor to PC with the connect interface cable USB – 3.5mm Art.No.: 00-0-0070

The sensor is supplied with 0 - 10VDC linear outputs for Out(1), Out(2) and Out(3) (see Table 1). Alternative output ranges can be configured with PC software UIP (version 5 or higher). See information at senseair.com.

Outputs

Out1/Out2/Out3

1	2	3	4 Outputs																																	
<table border="1"> <tr><td>CO₂</td><td>429ppm</td></tr> <tr><td>Temperature</td><td>23.1°C</td></tr> <tr><td>Humidity</td><td>21%RH</td></tr> <tr><td colspan="2" style="text-align: center;"></td></tr> </table>	CO ₂	429ppm	Temperature	23.1°C	Humidity	21%RH			<table border="1"> <tr><td>CO₂</td><td>Screen</td></tr> <tr><td>Temperature</td><td>Set</td></tr> <tr><td>Humidity</td><td></td></tr> </table>	CO ₂	Screen	Temperature	Set	Humidity		<table border="1"> <tr><td>Enter PIN</td><td colspan="2">2001</td></tr> <tr><td></td><td>2</td><td>3</td></tr> <tr><td></td><td>5</td><td>6</td></tr> <tr><td></td><td>8</td><td>9</td></tr> <tr><td>Del</td><td>0</td><td>«</td></tr> </table>	Enter PIN	2001			2	3		5	6		8	9	Del	0	«	<table border="1"> <tr><td>Meter</td></tr> <tr><td>Measurements</td></tr> <tr><td>Outputs</td></tr> <tr><td>Misc</td></tr> </table>	Meter	Measurements	Outputs	Misc
CO ₂	429ppm																																			
Temperature	23.1°C																																			
Humidity	21%RH																																			
CO ₂	Screen																																			
Temperature	Set																																			
Humidity																																				
Enter PIN	2001																																			
	2	3																																		
	5	6																																		
	8	9																																		
Del	0	«																																		
Meter																																				
Measurements																																				
Outputs																																				
Misc																																				

Voltage range

Max (the same approach with "Min")

5 Out2	6	7 Max	8 10.0V, 9.9V..5.0V..																
<table border="1"> <tr><td>Out1</td><td>10.0V</td></tr> <tr><td>Out2</td><td>4.8V</td></tr> <tr><td>Out3</td><td>4.8V</td></tr> <tr><td>Relay</td><td>1(active)</td></tr> </table>	Out1	10.0V	Out2	4.8V	Out3	4.8V	Relay	1(active)	<table border="1"> <tr><td>Out2</td><td>Temp</td></tr> </table>	Out2	Temp	<table border="1"> <tr><td>Source</td><td>Temp</td></tr> <tr><td>Type</td><td>Low 0°C High 50°C</td></tr> </table>	Source	Temp	Type	Low 0°C High 50°C	<table border="1"> <tr><td>Max limit</td><td>5.0V</td></tr> </table>	Max limit	5.0V
Out1	10.0V																		
Out2	4.8V																		
Out3	4.8V																		
Relay	1(active)																		
Out2	Temp																		
Source	Temp																		
Type	Low 0°C High 50°C																		
Max limit	5.0V																		
9	10	UIP																	
<table border="1"> <tr><td>Max limit</td><td>5.0V</td></tr> </table>	Max limit	5.0V	<table border="1"> <tr><td>Max</td><td>5.0V</td></tr> <tr><td>Min</td><td>0.0V</td></tr> <tr><td>Source</td><td>Temp</td></tr> <tr><td>Type</td><td>Low 0°C High 50°C</td></tr> </table>	Max	5.0V	Min	0.0V	Source	Temp	Type	Low 0°C High 50°C								
Max limit	5.0V																		
Max	5.0V																		
Min	0.0V																		
Source	Temp																		
Type	Low 0°C High 50°C																		

Select source

7 Source	8	9	10																																		
<table border="1"> <tr><td>Max</td><td>5.0V</td></tr> <tr><td>Min</td><td>0.0V</td></tr> <tr><td>Source</td><td>Temp</td></tr> <tr><td>Type</td><td>Low 0°C High 50°C</td></tr> </table>	Max	5.0V	Min	0.0V	Source	Temp	Type	Low 0°C High 50°C	<table border="1"> <tr><td>Source</td><td>Temp</td><td>CO₂</td></tr> <tr><td>Ch1</td><td>Ch4</td><td>Ch5</td></tr> <tr><td>Ch2</td><td>Ch7</td><td>Disable</td></tr> </table>	Source	Temp	CO ₂	Ch1	Ch4	Ch5	Ch2	Ch7	Disable	<table border="1"> <tr><td>Source</td><td>Temp</td><td>CO₂</td></tr> <tr><td>Ch3</td><td>Ch4</td><td>Ch5</td></tr> <tr><td>Ch6</td><td>Ch7</td><td>Disable</td></tr> </table>	Source	Temp	CO ₂	Ch3	Ch4	Ch5	Ch6	Ch7	Disable	<table border="1"> <tr><td>Max</td><td>5.0V</td></tr> <tr><td>Min</td><td>0.0V</td></tr> <tr><td>Source</td><td>CO₂</td></tr> <tr><td>Type</td><td>Low 0ppm High 2000ppm</td></tr> </table>	Max	5.0V	Min	0.0V	Source	CO ₂	Type	Low 0ppm High 2000ppm
Max	5.0V																																				
Min	0.0V																																				
Source	Temp																																				
Type	Low 0°C High 50°C																																				
Source	Temp	CO ₂																																			
Ch1	Ch4	Ch5																																			
Ch2	Ch7	Disable																																			
Source	Temp	CO ₂																																			
Ch3	Ch4	Ch5																																			
Ch6	Ch7	Disable																																			
Max	5.0V																																				
Min	0.0V																																				
Source	CO ₂																																				
Type	Low 0ppm High 2000ppm																																				
UIP 1 Source CO ₂ selected		2 Set (Save)																																			

Types
Analogue/Analogue Invert

<p>7 Analogue</p>	<p>8</p> <p>Type An,Inv</p> <p>Analog Analog Invert</p> <p>Digital Digital Invert</p>	<p>9</p> <p>Type An,Inv</p> <p>Analog Analog invert</p> <p>Digital Digital invert</p>	<p>10 Analogue invert</p>
--------------------------	--	--	----------------------------------

UIP5 **1** Invert **2** Save (Set)

Digital/Digital Invert

<p>10 Digital</p>	<p>10 Digital Invert</p>
--------------------------	---------------------------------

Measure range settings
Low (the same approach with "High")

<p>7 Low 600ppm</p>	<p>8 600, 550...400ppm</p> <p>Low 400ppm</p>	<p>9 Low 400ppm</p> <p>Low 400ppm</p>	<p>10</p>
----------------------------	---	--	------------------

UIP

Outputs

Relay

<p>1</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p>	<p>2</p> <p>CO₂ Screen</p> <p>Temperature Set</p> <p>Humidity</p> <p>«</p>	<p>3</p> <p>Enter PIN 2001</p> <table border="1"> <tr><td>2</td><td>3</td></tr> <tr><td>5</td><td>6</td></tr> <tr><td>8</td><td>9</td></tr> <tr><td>Del</td><td>0</td></tr> <tr><td></td><td>«</td></tr> </table>	2	3	5	6	8	9	Del	0		«	<p>4 Outputs</p> <p>Meter</p> <p>Measurements</p> <p>Outputs </p> <p>Misc «</p>
2	3												
5	6												
8	9												
Del	0												
	«												
<p>5 Relay</p> <table border="1"> <tr><td>Out1</td><td>10.0V</td></tr> <tr><td>Out2</td><td>4.8V</td></tr> <tr><td>Out3</td><td>4.8V</td></tr> <tr><td>Relay</td><td>1(active)</td></tr> </table> <p>«</p>	Out1	10.0V	Out2	4.8V	Out3	4.8V	Relay	1(active)	<p>6</p> <p>Relay CO₂</p> <p>«</p>	<p>7 Type Digital</p> <p>Max 1</p> <p>Min 0</p> <p>Source CO₂</p> <p>Low 900ppm High 1000ppm «</p>	<p>8</p> <p>Type Dig,Inv</p> <p>Digital Digital invert «</p>		
Out1	10.0V												
Out2	4.8V												
Out3	4.8V												
Relay	1(active)												
<p>9</p> <p>Type Dig,Inv</p> <p>Digital Digital invert</p>	<p>10</p> <p>Max 1</p> <p>Min 0</p> <p>Source CO₂</p> <p>Type Dig,Inv Low 900ppm High 1000ppm «</p>	<p>UIP</p>											

Communication settings

Protocol

<p>5 RS-485</p> <p>Meter info RS-485 </p> <p>PIN1 PIN1 </p> <p>Reset</p> <p>«</p>	<p>6</p> <p>Protocol Auto</p> <p>Address 10</p> <p>Baudrate 9600</p> <p>Parity, Stop bits None, 1</p> <p>Reset needed to activate new communication settings «</p>	<p>7 NOTE!</p> <p>Protocol Auto</p> <p> Modbus BACnet</p> <p>«</p>	<p>8</p> <p>Protocol Auto</p> <p>Auto Modbus BACnet</p>
<p>9 NOTE!</p> <p>Meter info RS-485</p> <p>PIN1 PIN2</p> <p>Reset </p> <p>«</p>	<p>UIP 1</p>		<p>2</p> <p>Property value</p> <p>Auto <input checked="" type="radio"/></p> <p>Modbus <input type="radio"/></p> <p>BACnet <input type="radio"/></p> <p>Set</p> <p>Revert</p>

Address/Baud rate

<p>6</p> <p>Reset needed to activate new communication settings</p>	<p>7</p>	<p>8</p>	<p>9 NOTE!</p>
<p>1</p>	<p>2</p>	<p>3</p>	
<p>1 Misc</p>	<p>2</p>	<p>3</p>	

Connection configurations

<p>1</p>	<p>2 ModBus 3 Choose SenseAir Cable if bought from SenseAir, otherwise choose COM Port 4 Save</p>
<p>5 Lower right corner of screen</p>	<p>6</p>

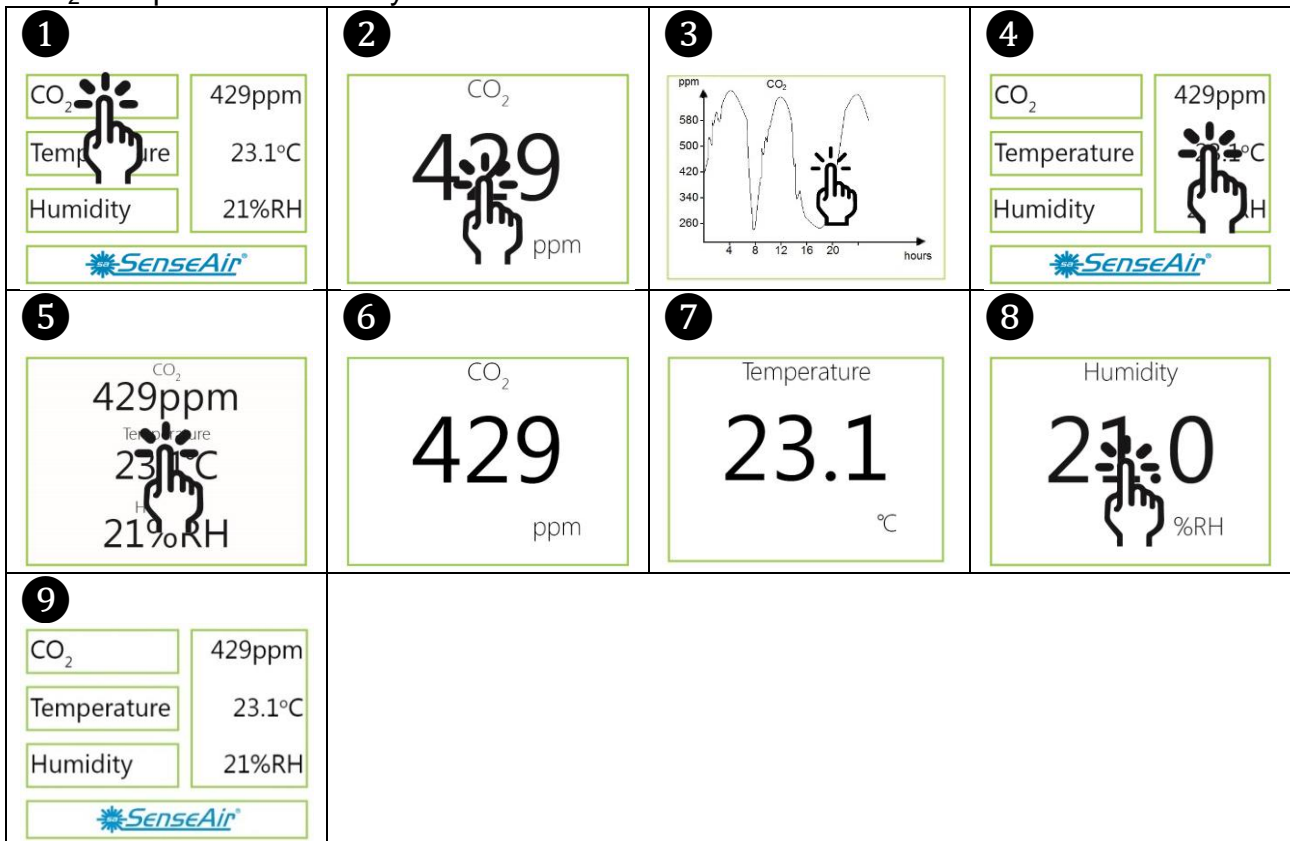
NOTE!

UIP baud rate \neq RS-485 baud rate if *tSENSE (Disp)* is connected via *phone jack* (see fig. 2).
 UIP baud rate = RS-485 baud rate if *tSENSE (Disp)* is connected via *screw terminal* (see fig. 3).

RS-485 Protocol parameter set to "Auto": the sensor selects protocol depending on the protocol used on the network it is connected to. After power on the sensor then listens to the traffic on the RS-485 network. If the sensor detects valid BACnet or Modbus messages the sensor will start to use the detected protocol. Change communication settings via UIP requires Reset (Power OFF – Power ON) to be executed.

Measured values

CO₂/Temperature/Humidity



Display settings

Limits

CO₂/(Temperature)/(Humidity)

CO₂ Yellow/Red limit (Temp./Humidity, the same approach as for CO₂ limit settings)

<p>1</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p>	<p>2</p> <p>CO₂ Screen</p> <p>Temp Settings</p> <p>Humidity</p> <p>«</p>	<p>3</p> <p>Yellow limit 600ppm</p> <p>Red limit 1000ppm</p> <p>Chart 24h</p> <p>«</p>	<p>4 100,200...700ppm</p> <p>Yellow limit -700ppm-</p> <p>-</p>
<p>CO₂ red limit 1000ppm</p> <p>RH yellow limit 70%RH</p>	<p>CO₂ red limit 1000ppm</p>	<p>RH yellow limit 70%RH</p>	
<p>CO₂ 1205ppm</p> <p>Temperature 73.6°F</p> <p>Humidity 72%RH</p>	<p>CO₂</p> <p>1205</p> <p>ppm</p>	<p>Humidity</p> <p>72.0</p> <p>%RH</p>	

Chart 24h/Week

<p>1</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p>	<p>2</p> <p>CO₂ Screen</p> <p>Temp Settings</p> <p>Humidity</p> <p>«</p>	<p>3</p> <p>Yellow limit 600ppm</p> <p>Red limit 1000ppm</p> <p>Chart 24h</p> <p>«</p>	<p>4</p> <p>CO₂Chart Week</p> <p>24h</p>
--	--	---	--

Screen settings

1	2
<p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p> <p></p>	<p>CO₂ Screen</p> <p>Temperature Sett</p> <p>Humidity</p> <p>«</p>

Brightness

3	4 10, 20,...50%
<p>Brightness 10%</p> <p>Background Normal</p> <p>Display Scheme Active</p> <p>Toggle Ind area «</p>	<p>Brightness 50%</p> <p>Energy save brightness</p> <p>«</p>

Background

3	4	5	6
<p>Brightness 50%</p> <p>Background Normal</p> <p>Display Scheme Active</p> <p>Toggle Ind area «</p>	<p>Background color Invert</p> <p>Normal Invert</p> <p>«</p>	<p>Background color Invert</p> <p>Normal Invert</p> <p>«</p>	<p>Brightness 50%</p> <p>Background Invert</p> <p>Sleep Scheme Active</p> <p>Toggle Ind area «</p>

Screensaver, Time setting

Interval

3	4	5 3,4,5...10 s	6 50 s
<p>Brightness 50%</p> <p>Background Normal</p> <p>Display Scheme Active</p> <p>Toggle Ind area «</p>	<p>Display Scheme Interval</p> <p>Active</p> <p>Energy save</p> <p>Interval «</p>	<p>Sleep Interval 10s</p> <p>«</p>	

Toggle (Time and CO₂ and/or Temperature and/or Humidity)

Toggle time

<p>3</p> <p>Brightness 50%</p> <p>Background Normal</p> <p>Display Scheme Interval</p> <p>Toggle Ind area</p>	<p>4</p> <p>Toggle Time 3s - +</p> <p>CO₂ X</p> <p>Temperature X</p> <p>Humidity X</p>	<p>5</p> <p>Toggle Time 3s - +</p> <p>CO₂ X</p> <p>Temperature X</p> <p>Humidity X</p>	<p>6</p> <p>Brightness 50%</p> <p>Background Normal</p> <p>Display Scheme Interval</p> <p>Toggle Ind area</p>
<p>7</p> <p>CO₂ Screen</p> <p>Temperature Settings</p> <p>Humidity</p>	<p>8 Check</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21.0%RH</p> <p><i>SenseAir</i></p>	<p>9</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21.0%RH</p> <p><i>SenseAir</i></p>	<p>10 3 s</p> <p>CO₂ 429 ppm</p>
<p>11 3 s</p> <p>Temperature 23.1 °C</p>	<p>12 3 s</p> <p>Humidity 21.0 %RH</p>	<p>13</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21.0%RH</p> <p><i>SenseAir</i></p>	

Toggle CO₂ and/or Temperature and/or Humidity

<p>3</p> <p>Brightness 50%</p> <p>Background Normal</p> <p>Display Scheme Interval</p> <p>Toggle Ind area</p>	<p>4</p> <p>Toggle Time 3s - +</p> <p>CO₂</p> <p>Temperature</p> <p>Humidity X</p>	<p>5</p> <p>Toggle Time 3s - +</p> <p>CO₂</p> <p>Temperature X</p> <p>Humidity X</p>	<p>6</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21.0%RH</p>
<p>7 Will NOT show up</p> <p>CO₂ 429 ppm</p>	<p>8 3 s</p> <p>Temperature 23.1 °C</p>	<p>9 3 s</p> <p>Humidity 21.0 %RH</p>	

Meter settings

Meter information

<p>1</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p>	<p>2</p> <p>CO₂ Screen</p> <p>Temperature Settings</p> <p>Humidity</p>	<p>3</p> <p>Enter PIN 2001</p> <table border="1"> <tr><td>2</td><td>3</td></tr> <tr><td>5</td><td>6</td></tr> <tr><td>8</td><td>9</td></tr> <tr><td>Del</td><td>0</td></tr> </table>	2	3	5	6	8	9	Del	0	<p>4</p> <p>Meter</p> <p>Measurements</p> <p>Outputs</p> <p>Misc</p>																		
2	3																												
5	6																												
8	9																												
Del	0																												
<p>5</p> <p>Meter info RS-485</p> <p>PIN1 PIN2</p> <p>Reset</p>	<p>6</p> <p>Meter information</p> <table border="1"> <tr><td>Meter status</td><td>0x0</td></tr> <tr><td>Version</td><td>1.06</td></tr> <tr><td>Serial Number</td><td>0x30DA676</td></tr> <tr><td>Type ID</td><td>404</td></tr> <tr><td>Map Version</td><td>72</td></tr> </table>	Meter status	0x0	Version	1.06	Serial Number	0x30DA676	Type ID	404	Map Version	72	<p>UIP</p> <p>UIP5</p> <p>File Meter Help</p> <ul style="list-style-type: none"> Meter Values Value Graph (Alt+g) Log to file Connection Meter information <table border="1"> <tr><td>Vendor Name</td><td>SenseAir AB</td></tr> <tr><td>Product Code</td><td>tSENSE</td></tr> <tr><td>Serial Number</td><td>0x030DA676</td></tr> <tr><td>Firmware</td><td>0x66010C</td></tr> <tr><td>Type ID</td><td>404</td></tr> <tr><td>Map Version</td><td>72</td></tr> <tr><td>Network Address</td><td>10</td></tr> <tr><td>Error Flags</td><td></td></tr> </table> 		Vendor Name	SenseAir AB	Product Code	tSENSE	Serial Number	0x030DA676	Firmware	0x66010C	Type ID	404	Map Version	72	Network Address	10	Error Flags	
Meter status	0x0																												
Version	1.06																												
Serial Number	0x30DA676																												
Type ID	404																												
Map Version	72																												
Vendor Name	SenseAir AB																												
Product Code	tSENSE																												
Serial Number	0x030DA676																												
Firmware	0x66010C																												
Type ID	404																												
Map Version	72																												
Network Address	10																												
Error Flags																													

Temperature unit (°C/°F)

<p>4</p> <p>Meter</p> <p>Measurements</p> <p>Outputs</p> <p>Misc</p>	<p>5</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p>	<p>6</p> <p>Temperature offset</p> <p>Temperature unit</p>	<p>7</p> <p>Temperature Units °F</p> <p>Celsius Fahrenheit</p>
<p>UIP5 1 Misc</p> <p>Select property to edit:</p> <ul style="list-style-type: none"> Temperature Unit (C/F) Altitude(m) RS-485 Protocol (reset to activate new se RS-485 Baudrate (reset to activate new se RS-485 Parity (reset to activate new settin RS-485 Stop bits (reset to activate new se <p>Property value</p> <p>C</p> <p>F</p> <p>Set Revert</p>		<p>2</p> <p>Property value</p> <p>C</p> <p>F</p> <p>Set Revert</p>	

Calibration options CO₂

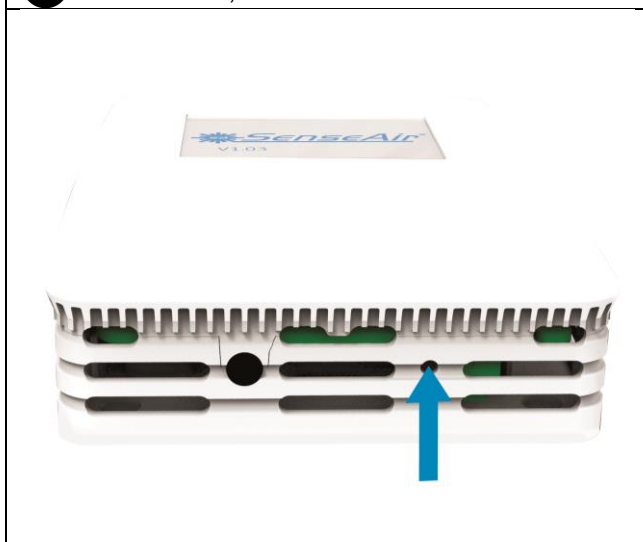
4	5
<p>Meter</p> <p>Measurements</p> <p>Outputs</p> <p>Misc</p>	<p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p>

Zero cal/Background/Target cal

6	7	8	9
<p>Zero ABC</p> <p>Background Altitude</p> <p>Target cal Restore cal</p>	<p>Start zero calibration cycle?</p> <p>No</p> <p><small>Zero calibration use 0ppm as calibration target, calibration cycle takes ~5</small></p>	<p>Zero calibration active</p>	<p>Verifying</p>
10	11	<p>UIP: If reference meter shows e.g. CO₂-value 500ppm set Target to 500</p>	
<p>Zero calibration succeeded</p>	<p>Zero cal ABC</p> <p>Background Altitude</p> <p>Target cal Restore cal</p>		

Background calibration button

1 Press for 15s, until...



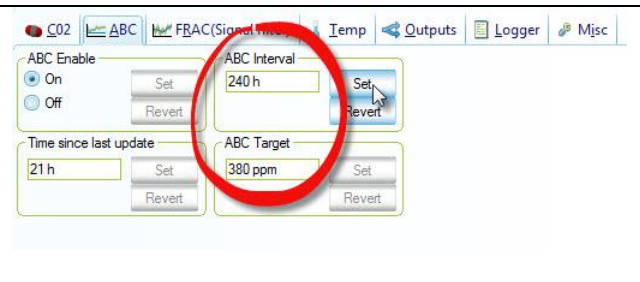
2 Green LED blinks twice



ABC Enable/Disable

<p>1</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p> <p></p> <p></p>	<p>2</p> <p>CO₂ Screen</p> <p>Temperature Settings</p> <p>Humidity</p> <p></p> <p>«</p>	<p>3</p> <p>Enter PIN 2001</p> <table border="1"> <tr><td></td><td>2</td><td>3</td></tr> <tr><td></td><td>5</td><td>6</td></tr> <tr><td></td><td>8</td><td>9</td></tr> <tr><td>Del</td><td>0</td><td>«</td></tr> </table>		2	3		5	6		8	9	Del	0	«	<p>4</p> <p>Meter</p> <p>Measurements</p> <p>Outputs</p> <p>Misc</p> <p>«</p> <p></p>
	2	3													
	5	6													
	8	9													
Del	0	«													
<p>5</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p> <p>«</p> <p></p>	<p>6</p> <p>Zero cal ABC</p> <p>Background Altitude</p> <p>Target cal Restore cal</p> <p>«</p> <p></p>	<p>7</p> <p>ABC Inactive</p> <p>ABC period 180hours</p> <p>ABC target 380ppm</p> <p>«</p> <p></p>	<p>8</p> <p>ABC Active</p> <p>Enable Disable</p> <p>Save new ABC state?</p> <p>No</p> <p>«</p> <p></p>												
<p>9 Save</p> <p>ABC Active</p> <p>Enable Disable</p> <p>Save new ABC state?</p> <p>No</p> <p>«</p> <p></p>	<p>UIP</p> <p>ABC Enable: <input checked="" type="radio"/> On <input type="radio"/> Off</p> <p>ABC Interval: 180 h</p> <p>ABC Target: 380 ppm</p>														

ABC period (ABC target/Altitude (msl)/Restore cal)

<p>5</p> <p>CO2 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p> <p>«</p>	<p>6</p> <p>Zero cal ABC</p> <p>Background Altitude</p> <p>Target cal Restore cal</p> <p>«</p>	<p>7</p> <p>ABC Inactive</p> <p>ABC period 180hours</p> <p>ABC target 380ppm</p> <p>«</p>	<p>8</p> <p>ABC period 180 hours</p> <p>- +</p> <p>Save new ABC period?</p> <p>Yes No</p> <p>«</p>
<p>9</p> <p>ABC period 240 hours</p> <p>- +</p> <p>Save new ABC period?</p> <p>Yes No</p> <p>«</p>	<p>10 180, 181, 240hours</p> <p>ABC period 240 hours</p> <p>- +</p> <p>Save new ABC period?</p> <p>Yes No</p> <p>«</p>	<p>11 Save</p> <p>Saving ABC period</p> <p>██████████</p>	<p>12</p> <p>Verifying</p> <p>██████████</p>
<p>13</p> <p>ABC period set to 240 hours</p>	<p>1 4</p> <p>Zero cal ABC</p> <p>Background Altitude</p> <p>Target cal Restore cal</p> <p>«</p>	<p>UIP</p> 	

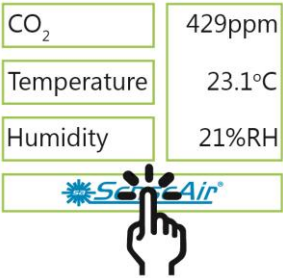
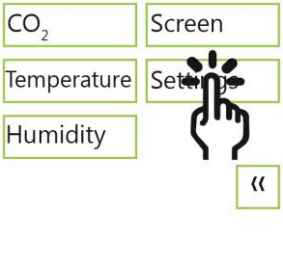
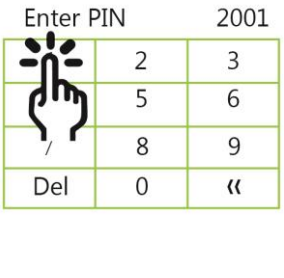
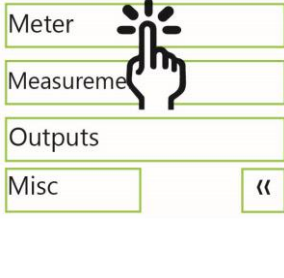


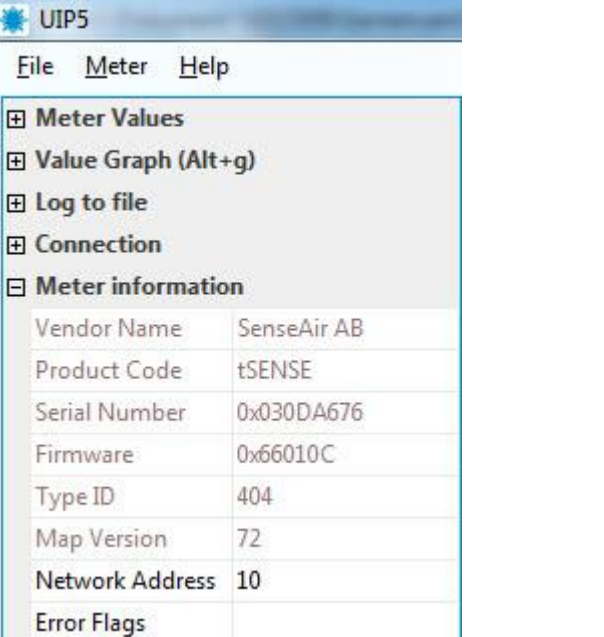
Temperature/Humidity Offset

<p>5</p> <p>CO2 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p> <p>«</p>	<p>6</p> <p>Temperature offset</p> <p>Temperature offset</p> <p>«</p>	<p>7 0.0...-0.1...-2.5°C</p> <p>Temperature offset -2.5°C</p> <p>+ -</p> <p>«</p>	<p>Temperature offset -2.5°C</p> <p>- +</p> <p>«</p>
--	--	--	--

Automatic system test

A full system test is executed automatically at every power-up. Sensor probes are checked constantly during operation against failure by checking valid dynamic measurement ranges.

System checks returns error bytes to RAM. Error codes are available by connecting the sensors to a PC with a special USB cable (art.no. 00-0-0070) connected (see fig. 2). Error codes are shown in the display at "Meter status" and in software UIP (version 5 or higher).

<p>1</p> 	<p>2</p> 	<p>3</p> 	<p>4</p> 
<p>5</p> 	<p>6</p> 	<p>UIP</p> 	

Error codes and action plans

Error symbol (a wrench appears when one or several error codes are active)



Bit #	Error code	Error description	Suggested action
0	CO ₂ sensor Com. error	No ability to communicate with CO ₂ sensor module.	Try to restart sensor by power OFF - power ON. Contact local distributor.
1	CO ₂ sensor CO ₂ measure error	CO ₂ measurement error.	Try Background calibration ("Calibration options CO ₂ " p.16). Contact local distributor. <i>See Note 1!</i>
2	T sensor T measure error	Temp measurement error.	Try to restart sensor by power OFF - power ON. Contact local distributor.
3	RH/T sensor com error	No ability to communicate with RH/T sensor module.	
4	RH/T sensor RH measure error	RH measurement error.	
5	RH/T sensor T measure error	Temp measurement error, sensor will use CO ₂ sensor temperature if RH/T Temperature is unavailable. S_Temp will be set to NTC_Temp.	
6			
7			
8	Output config. error	Error in output configuration. Output is still updated, i.e. can be 0-10V	Check connections and loads of outputs. Check detailed settings and configuration with UIP software version 5 or higher. Contact local distributor.
9	Memory error	One or several bytes of sensors parameter memory (settings) are corrupt	Try to restart sensor by power OFF/ON Contact local distributor.

Table 2: Error codes and action plans.

NOTE!

Occurs if probe is out of range, at very high CO₂ values. Error code resets automatically when measured values returns to normal. May also indicate need of zero point calibration. If CO₂ values are normal and error code remains, the sensor can be defect or the connections to it are broken.

If several errors are detected at the same time, different error code numbers will be added together into one single error code!

Sensor accuracy is defined at continuous operation (at least three (3) weeks after installation).

UIP Logger Alternative 1

<p>1 Start to Read Log Data from sensor</p>	<p>2 Records for compability between UIP and other sensor types. NOTE! Sensor has no timer.</p>
	<div style="border: 1px solid black; padding: 5px;"> <p>Logger Data</p> <pre> 1 Log 2 Measurement Start, stat=0xFF, t=2015-01-01 00:00:00 3 Data, CO2=735 ppm, Temp=24.25 °C, RH=20.87 % 4 Data, CO2=672 ppm, Temp=24.21 °C, RH=20.47 % 5 Data, CO2=667 ppm, Temp=24.22 °C, RH=20.49 % 6 Measurement End, stat=0xFF, t=2015-11-19 11:31:25 </pre> </div> <p>1 Measurement Start. Record added by UIP for compatibility between UIP and other sensor types. Status = dummy value Timestamp = dummy value 2 Oldest data record in log, average values for 15 minutes 3 Average values for 15 minutes after point 2 4 Measurement end. Record added to readout by UIP Status = dummy value Timestamp = time log was read from sensor</p>

The sensor has no Real-time clock, if the sensor has not been powered on continuously, time between data points can be much longer than 15 minutes.

Export Logger Data

<p>1</p>	<p>2 Options</p>	<table border="1"> <thead> <tr> <th>Status</th> <th>Type</th> <th>CO2 (ppm)</th> <th>Temp (°C)</th> <th>RH (%)</th> </tr> </thead> <tbody> <tr> <td>0xFF</td> <td>Measurement_Start, t=2015-01-01 00:00:00</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0xFF</td> <td>Data</td> <td>574</td> <td>21.46</td> <td>327.66</td> </tr> <tr> <td>0xFF</td> <td>Data</td> <td>578</td> <td>21.50</td> <td>25.01</td> </tr> <tr> <td>0xFF</td> <td>Data</td> <td>579</td> <td>21.51</td> <td>25.08</td> </tr> </tbody> </table>	Status	Type	CO2 (ppm)	Temp (°C)	RH (%)	0xFF	Measurement_Start, t=2015-01-01 00:00:00				0xFF	Data	574	21.46	327.66	0xFF	Data	578	21.50	25.01	0xFF	Data	579	21.51	25.08
Status	Type	CO2 (ppm)	Temp (°C)	RH (%)																							
0xFF	Measurement_Start, t=2015-01-01 00:00:00																										
0xFF	Data	574	21.46	327.66																							
0xFF	Data	578	21.50	25.01																							
0xFF	Data	579	21.51	25.08																							

Alternative 2 Log to file

<p>1 Start log to file on PC</p>															
<p>2</p>															
<p>3</p> <table border="1"> <thead> <tr> <th>Time</th> <th>Offset ÅmsÅ</th> <th>Temperature ÅOCÅ</th> <th>CO2 Value ÅppmÅ</th> <th>Relative Humidity Å%Å</th> </tr> </thead> <tbody> <tr> <td>2015-11-17 13:11:58</td> <td>9149974</td> <td>685.00</td> <td>24.36</td> <td>24.36</td> </tr> <tr> <td>2015-11-17 13:12:03</td> <td>9154919</td> <td>685.00</td> <td>24.31</td> <td>24.36</td> </tr> </tbody> </table>	Time	Offset ÅmsÅ	Temperature ÅOCÅ	CO2 Value ÅppmÅ	Relative Humidity Å%Å	2015-11-17 13:11:58	9149974	685.00	24.36	24.36	2015-11-17 13:12:03	9154919	685.00	24.31	24.36
Time	Offset ÅmsÅ	Temperature ÅOCÅ	CO2 Value ÅppmÅ	Relative Humidity Å%Å											
2015-11-17 13:11:58	9149974	685.00	24.36	24.36											
2015-11-17 13:12:03	9154919	685.00	24.31	24.36											

PIN codes

1	2	3	4

Change PIN code for access to display settings (PIN1)

5 PIN1	6 (Default 0000)	7

Toggle PIN1 On/Off

6	7

Change PIN code for access to meter settings (PIN2)

5 PIN2	6 Create PIN2 Code	7 Save

Maintenance

tSENSE (Disp) is maintenance free. Internal self-adjusting calibration (ABC) function takes care of normal long term drift. To secure highest accuracy, a time interval of five years is recommended between CO₂ calibrations, unless some special situations have occurred.

Software can be downloaded free at www.senseair.com.
USB-cable and zero calibration kit can be ordered from SenseAir.

Check can be done on site without interfering with ventilation system.



Contact

SenseAir[®] AB Europe

Box 96
Stationsgatan 12
SE- 82060 Delsbo
Sweden

Phone: +46 (0) 653 - 71 77 70
E-mail: info@senseair.com
Web: senseair.com

SenseAir[®] North America

29030 SW Town Center Loop East
Suite 202 #169
Wilsonville, OR 97070
USA

Phone: +1 (520) 349-7686
E-mail: infoamerica@senseair.com
Web: senseair.com

SenseAir[®] Asia

SenseAir[®] Chengdu Gas Sensors Ltd.
First floor of 8th of Xingke South Road
Jiniu High-Tech, Industrial Park
610036, Chengdu
China

Phone: +86 - 028 875 928 85
E-mail: info@senseair.asia
Web: senseair.asia